



JOI™



JOI™ 7 Lite

Quick Start Guide

# Getting Started

Congratulations on your purchase of JOI™ 7 Lite! This manual will get you cruising with your JOI™ 7 Lite in no time. We hope you get an enjoyable experience out of your new purchase.

## Table of contents

### Precautions

### Getting to know JOI™ 7 Lite

### Welcome to Android

- About Android 5.1
- Set up your device
- Get around / JOI™ 7 Lite navigation buttons

### Essentials

- Notifications & Settings
- Quick Settings
- Lock Screen

### Use the keyboard

- Enter & edit text
- Basic Editing

### Try some apps

- All apps
- Google Play

### Settings

- Organize your Home screens
- Touch & type
- Android version & updates

- Android Device Manager
- Screenshots

- Phone / Gmail
- Camera

# Precautions

1. Prevent the device from falling to the ground or exposing it to strong impact in any form.
2. Prevent prolonged usage of this device in environments where the temperature is too cold, too warm (>35°C), or places with high humidity and dust level. Do not expose the device to strong sunlight for prolonged periods.
3. Avoid using the device in areas with strong magnetic and static field.
4. If the device comes into contact with water or any form of liquid, switch it off immediately. Only resume usage when the said water or liquid has dried off completely.
5. If cleaning is necessary, only use a dry and soft cloth or tissue paper.
6. Please back up important data from time to time to avoid data loss.
7. SNS Network shall not be held responsible for the loss of data on the device due to abnormal software and hardware operations, maintenance or any other accidents.
8. Please do not disassemble the device yourself. Doing so will cause the warranty to become void. Repairs should only be carried out by authorized parties.
9. Only use the battery that comes with the device. Using untested third-party batteries is a risk to your device and also your personal safety.

# Getting to know JOI™ 7 Lite

Micro USB port      Headset Jack  
 Cover Gap      Front Camera      Earpiece



Microphone

Back Camera      Micro SD card slot      Dual SIM card slots



Volume

Power /  
Lock Key

Speakers

Micro USB port	Connect the charger (USB Cable included) and other accessories	Power/ Lock Key	Press and hold to turn on/off the device. Press to lock/wake up the screen
Headset Jack	Connect to any earphone or headset (not included)	Microphone	Records audio and detect voice commands
Front Camera	Take self-portraits and videos of yourself	Micro SD card slot	Remove the back cover to insert a microSD card to store more files
Earpiece	For listening to a call	Back Camera	Take pictures and record videos
Cover Gap	Slot to remove cover	Dual SIM card slot	Remove the back cover and insert a maximum of 2 SIM cards
Volume	Adjust the level of sound and audio	Speakers	Play music and other sounds

# Welcome to Android

## About Android 5.1

Android 5.1 (Lollipop) is the latest version of Android, the operating system that powers not just phones and tablets, but also wearables, TVs, and even cars.

This guide introduces the Android 5.1 software available on JOI™ 7 Lite. It doesn't describe hardware details such as SIM card instructions, battery information, specs, and so on.

For comprehensive information about this product, visit [joi.com.my](http://joi.com.my)

## Set up your device

When you first turn on, you'll see a Welcome screen. Choose the language you want and touch Start or the ▶ Start icon.

**IMPORTANT:** To complete the setup process, you must have a Wi-Fi or mobile Internet connection.

When prompted, you can sign in with your Google Account or create one at that time. You can also choose to skip this step and create one later.

When you sign in with a Google Account, all the email, contacts, Calendar events, and other data associated with that account are automatically synced with your device. If you have more than one Android device, they are all kept in sync.

For example, if you change a friend's phone number on your phone, that change also appears on your tablet and on any computers where you're logged into your Google Account.

If you have multiple Google Accounts, you can add others later from Settings > Accounts > Add account.

## Get around




At the bottom of every Home screen you'll find the Favorites tray :another quick way to get to your apps.



To open an app, touch it. To drag an app in or out of the Favorites tray or anywhere else on a Home screen, touch & hold it, then move it with your finger into position

## JOI™ 7 Lite navigation buttons

At the bottom of every JOI™ 7 Lite screen, no matter what you're doing, you'll always find the navigation bar with three buttons

-  **Back**  
Opens the previous screen you were working in, even if it was in a different app. Once you back up to the Home screen, you can't go back any further.
-  **Home**  
Opens the central Home screen. To open Google Now, swipe up.
-  **Recent apps**  
Opens a list of thumbnail images of apps you've worked with recently. To open an app, touch it. To remove a thumbnail from the list, swipe it left or right.

Some apps hide these buttons temporarily, or fade them to small dots in the same position. To bring them back, touch the dots, touch the screen in the middle, or swipe up from the bottom

## Organize your Home screen

To change your wallpaper, add a widget, adjust Search settings, or change screen order, touch & hold the background of any Home screen.

- You can have any number of Home screens to the right. To add a new screen, swipe to the rightmost screen and drag an app or widget to the right edge.
- The screen to the left of the main Home screen is reserved for Google Now, and is available only when Google Now is turned on.
- To create a folder, slide one icon quickly on top of another.
- To name or rename a folder, open it and touch its name.

To change the wallpaper:

- Touch & hold the background, then touch  Wallpapers.
- Swipe right to left to choose a wallpaper image. Or choose an image from your Photos, Downloads or Drive.



## Touch & Type

To select or activate something, touch it

To type something, such as a name, password, or search terms, just touch where you want to type. A keyboard pops up that lets you type into the field.

Other common gestures includes :

- **Touch & hold**

Touch & hold an item on the screen by touching it and not lifting your finger until it responds. For example, this is how you access accent and other special characters on the keyboard.

- **Touch, hold, & drag**

Touch & hold an item for a moment and then, without lifting move your finger on the screen until you reach the target position. For example, you can move apps around on the Home screen

- **Swipe or slide**

Quickly move your finger across the surface of the screen, without pausing when you first touch (so you don't drag something instead). For example, you can slide a Home screen left or right to view the other Home screens

- **Double-tap**

Tap quickly twice on a webpage, map, or other screen to zoom. For example, double-tap a picture in Chrome to zoom in, and double-tap again to zoom out.

- **Scale**

In some apps (such as Maps, Chrome, and Gallery), you can scale by placing two or more fingers on the screen at once and pinching them together (to enlarge scale) or spreading them apart (to reduce it). Alternatively, in some apps you can double-tap and then, without lifting your finger, drag up to reduce or down to enlarge the scale of the image

- **Rotate the screen**

The orientation of most screens rotates with your device as you turn it. To lock or unlock a vertical orientation, swipe down from the top right of any screen and touch the Rotation icon in Quick Settings. To do the same thing on a phone, go to :

Settings > Device > Display



Settings

You can open your device's Settings app from the All Apps screen or from Quick Settings.

For example, to change notification sounds, volumes, and more, go to Settings > Device > Sound & notification

To change brightness, font size, and more, go to Settings > Device > Display

## Android version & updates

To check your version number or get the latest system update for JOI™ 7 Lite, first go to Settings > System > About phone. Then look for these labels:

- **System updates.**

Touch to check whether you have any pending system updates.

- **Android version.**

Look partway down the list for this heading and the number just below it

# Essentials

## Notifications & Settings

Notifications alert you to the arrival of new messages, calendar events and alarms, as well as ongoing events, such as video downloads

 
When a notification arrives, its icon appears at the top of the screen. Icons for pending notifications appear on the left and system icons showing things like Wi-Fi signal, mobile carrier signal, or battery strength on the right



Certain notifications can be expanded to show more information, such as email previews or calendar events. The one at the top is always expanded when possible. To expand a notification, position one finger inside it and swipe down slowly

To open the related app, touch the notification icon on the left. Some notifications also allow you to take specific actions by touching icons within the notifications. For example, Calendar notifications allow you to Snooze (remind you later) or send email to other guests

When you're finished with a notification, just swipe it away. To dismiss all notifications, touch the Dismiss icon at the top right

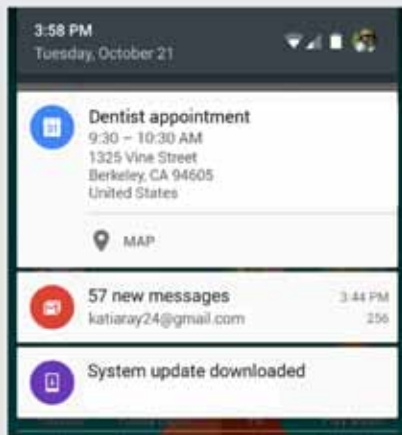

## Quick Settings

Use Quick Settings to easily access Wi-Fi settings, manage display brightness, open the main Settings menu and more. To open Quick Settings, swipe down from the top of the screen with two fingers




If you have a signal but no Internet connection, the bars indicating the strength of the Wi-Fi or mobile signal turn orange

You can also set Auto Rotate from Quick Settings to lock or unlock automatic screen rotation

## Lock Screen


If a lock is set for your screen, the screen goes dark and locks when the display goes to sleep or if you press the Power button

You can set locks of different strengths using lock settings:

1. Go to  Settings > Personal > Security > Screen lock
2. Touch the type of lock you'd like to use.

## Android Device Manager

If you lose your phone, the Android Device Manager can help you find its approximate location, make it ring, lock it or erase its data


These options are turned on by default. To view or change them, open the  Google Settings app and touch Android Device Manager

Then, if you lose your device, go to Android Device Manager and follow the instructions.

## Screenshots

To take a screenshot from JOI™ 7 Lite:

 
1. Make sure the image you want to capture is displayed on the screen.
2. Press the Power and Volume down buttons simultaneously. The screenshot is ... automatically saved in your Gallery.

**TIP:** To easily share your screenshot via Gmail, Google+, and more, swipe down the notification shade and touch the  Share icon below the preview of your screenshot

# Use the keyboard

## Enter & edit text

Use the onscreen keyboard to enter text. Here's what it looks like on this device

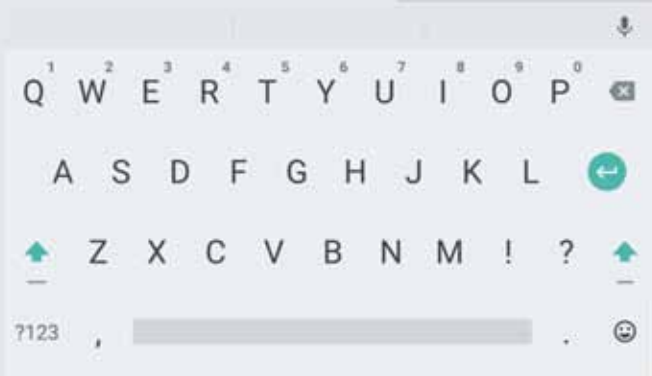

To make the keyboard go away, touch the Back button below it.

Some apps open the keyboard automatically. In others, you first need to touch where you want to type.

## Basic editing

- Move the insertion point.

Touch where you want to type. The cursor blinks in the new position, and a blue tab appears below it. Drag the tab to move the cursor.


- Select text.

Touch & hold or double-tap within the text. The nearest word highlights, with a tab at each end of the selection. Drag the tabs to change the selection. The tab disappears after a few moments. To make it reappear, touch the text again.

- Delete text.




Touch  to delete selected text or the characters before the cursor.

 
- Type capital letters.

Touch the Shift key once to switch to capital letters for one letter. Or touch & hold  Shift key while you type. When you release the key, the lowercase letters reappear.

- Turn caps lock on.

Double-tap or touch & hold  Shift key, so it changes to . Touch  Shift key again to return to lowercase.

- Cut, copy, paste. Select the text you want to manipulate. Then touch the  Cut or  Copy icons. If there's something on the clipboard to paste, you'll also see a  Paste button:

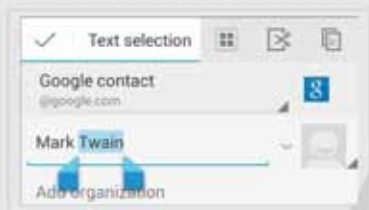



# Try some apps

## All Apps



All Apps


To see all your apps, touch the All Apps icon in the Favorites tray on any Home screen

This is where you can see all your apps, including those downloaded on Google Play. You can move app icons to any of your Home screens.

From All Apps, you can:

- Move between screens.  
Swipe left or right.
- Open an app.  
Touch its icon.
- Place an app icon on a Home screen.  
Touch & hold the app icon, slide your finger, and lift your finger to drop the icon in place

To remove an app icon from the Home screen without removing it permanently from your device, touch & hold it, slide your finger toward the top of the screen, and drop the app over the Remove icon

To view info about an app from an All App screen, touch & hold it, slide your finger towards the top of the screen and drop the app over the  App Info icon.

**TIP:** Some apps can harm you or your device. However, you don't need to purchase anti-virus software. Google can verify apps to help prevent harmful software from being installed. To control app verification, go to **Google Settings > Verify apps**.

## Google Play



Play Store

Google Play brings together all your favorite movies, TV shows, books, music, magazines, apps, and more in one place, so you can reach it from any of your devices. To open the Google Play Store app, touch the Play Store icon. Play Store icon

If you purchased content on Google Play in the past, you'll automatically have access to this content on any Android device just make sure you're signed in using the same account that you used to purchase it. To check:

1. Open the Play Store app.
2. Touch the  Drawer icon at the top left.

From here, you can view the current account or switch to another, view your purchased apps, check your wish list, and so on. To set preferences, clear your search history, and turn on user controls, go to Menu > Settings

For example, to filter Android apps based on maturity level or require a PIN before completing any purchase, touch Content filtering or Password

## Phone



Phone

You can place calls from the Phone app, the People app, or other apps or widgets that display contact information. Wherever you see a phone number, you can usually touch it to dial.

To place a call to one of your contacts:

1. Touch the Phone icon on a Home or All Apps screen.
2. To choose someone to call, scroll or search. If the keypad's in the way, touch the Back button to lower it.
3. To place a call, touch the contact's name.

To view recent calls, touch the  call log icon at the bottom of the screen. To use the keypad,  touch keypad icon.

## Gmail





Gmail

Use the Gmail app to read and write email from any mobile device. To open it, touch the Gmail icon on a Home or All Apps screen.

Gmail isn't just about email. You can use your Gmail account to sign in to all Google apps and services.

To change your settings, add an account, or get help, touch the menu icon or button.

**TIP:** If you're using Microsoft Exchange, you need to set up the  Email app, which is available in  All Apps.

## Camera



Camera

 
The Camera app lets you take photos, panoramic photos, and videos.

To open Camera:


- From the Home screen, touch the Camera icon.

The shutter and other controls float above the framed image at the bottom of the screen.

- To see the image you just took, swipe from right to left. When viewing stored photos, touch (icon) to share. Edit to modify photos and (icon) to delete.
- Keep swiping to see other images in Photos
- To change to a different mode, swipe left to right to show camera and video modes.

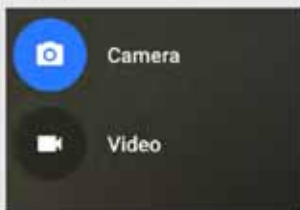

# Settings

 Most apps include their own settings, typically available from the  Menu > Settings on JOI™ 7 Lite

The fastest way to adjust system settings that you access frequently, such as Wi-Fi or brightness, is through Quick Settings.



To open the Settings app from Quick Settings, touch the Settings icon.



Settings

The Settings app controls the core Android settings for networks, hardware, location, security, language, accounts, and so on.

You can also open the Settings app from  All Apps. To get more information about most Settings screens, choose Help from the screen's menu.

These are the main types of system settings available. Click the links to see related help articles.

- Wireless & networks. Wi-Fi, Bluetooth, SIM cards, Data usage, and related settings.
- Device. Display, Sound & Notification, Storage, Battery, Apps & Screen Setting.
- Personal. Location, Security, Accounts, Language & Input, and backup/reset.
- System. Date & Time, Accessibility, Printing, Developer option, and device information.

Some useful settings are also available from the Google Settings app.





Model : JOI™ 7 LITE  
PN : AK-M728



[joi.com.my](http://joi.com.my)

The background features a network of glowing nodes connected by thin lines, with a dark blue wave-like shape at the bottom. The text 'JOI' is in a large, white, sans-serif font, with a small 'TM' trademark symbol to its upper right. Below it, the website address 'joi.com.my' is written in a smaller, white, lowercase sans-serif font.

JOI™  
joi.com.my